

# **i-Speak User's Manual**

---

---



***i-Speak***

## **Introduction**

---

i-Speak is a portable speaker specially designed for Apple's iPod, built in two stereo speakers. With i-Speak, you can free your tunes, break the silence or share your music with friends.



## **Features**

---

- Portable design, battery operated mini stereo system for your iPod.
- Enjoy your iPod without earphone or large wired external speakers.
- Share music with friends anywhere, anytime.
- Power on/off switch could save battery life while not using.
- Power Led indicator to make sure it works.

- i-Speak could last up to above 8 hours with AAA Battery of continuous playback.
- High quality stereo audio output.

## **Specifications**

---

- Dimensions: 61 x 33 x 21(mm)
- Weight: 25(g), without battery
- Power: AAA 1.5V alkaline battery x1
- Playback: 8 hours with new battery (at 0.5w sound output)
- Connector: Ø3.5(mm) earphone plug
- Speaker: Speaker(0.5W, 8ohm) x2

## **How to Use**

---

1. Remove the battery covers, then insert alkaline AAA battery, please note the (+) and (-) terminal.
2. Carefully connect the i-Speak into the “AV port/Remote& Headphone jack” above the iPod.
3. Turn on the power switch on the top of the i-Speak.
4. Check the LED indicator.
5. Play your favorite song from iPod.
6. Adjust the suitable volume from iPod then you are ready to share music and could be free from wired headset. Enjoy!

## **Compatibility**

---

The i-Speak is specifically designed to work with Apple's iPod. Some other MP3 players/devices have different impedance and may deliver undesirable different sound quality. We does not suggest use of this speaker with other MP3 devices.

## **Trouble Shooting**

---

- Problem: i-Speak doesn't work
  - Solution – Check the LED indicator
  - Solution – To make sure new AAA alkaline battery is inserted correctly
  - Solution – To make sure you had adjusted the volume on your iPod
  - Solution – To make sure the connector is completely plugged in
- Problem: i-Speak volume is low
  - Solution – To make sure the battery still have enough power
  - Solution – To make sure you had adjusted the suitable volume from iPod
- ※ not using, please remember to turn off the i-Speak to conserve battery power.

## **Precautions**

---

Do not drop or shock the i-Speak or else it may cause malfunction. Do not leave the i-Speak in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, or mechanical shock.

## **Contents**

---

- I-Speak x1
- User Manual x1